



SENTRY 3 WIRING DIAGRAM

Step 1: Turn the system off.

Step 2: Once the power is off, remove the two screws on the controller & pull the controller out

Step 3: For this step you can use either a flat screwdriver or needle nose pliers to take off the quick connects one at a time to the replacement controller

Step 4: Push all the wires out the way & slide the controller back in

Step 5: Screw the Sentry 3 controller back in.

If you have any questions or concerns feel free to give us a call at (858) 566-7465 or email us Info@Breezaire.com & we will be glad to help.

